Návod pre zmenu siete pri LTE routeri Huawei B593

- 1. Vložte SIM kartu, pripojte napájanie a zapnite router.
- 2. Prepojte PC a router dodávaným sieťovým káblom.
- 3. V internetovom prehliadači zadajte adresu 192.168.1.1
 - Poznámky:

Východzia IP adresa zariadenia je 192.168.1.1, maska podsiete 255.255.255.0 a heslo zariadenie admin.

Pokiaľ zariadenie nefunguje ako smerovač, odporúča sa automatické získavanie IP adresy a nastavenia DNS.

4. Zaškrtnite voľbu "Admin" v poli "User name", do poľa "Password" zadajte východzie heslo "admin" bez úvodzoviek a kliknite na "Log in".

5. V prípade, že je vložená SIM karta s aktívnou ochranou kódom PIN, kliknite na **"General Settings" - "SIM Settings"**, zadajte do poľa "PIN" a kliknite na "Submit". Pokiaľ chcete uložiť PIN kód natrvalo, zaškrtnite aj pole "Save my PIN".

English 💌	General Settings->SIM Settings						
	SIM Settings						
Status	-						
Setup Wizard	The PIN lock of the SIM card protects the router against unauthorized accesses to the Internet. You can activate, modify, or unlock the PIN.						
General Settings							
→ SIM Settings							
Internet Settings	Note: The router cannot provide Internet services when the SIM card is not inserted or the PIN fails to be verified.						
DHCP Settings							
WLAN Settings	PIN Management						
WLAN WPS	SIM card status: PIN required						
WLAN Multi-SSID	PIN verification: Enable						
WLAN Access Restrictions	PIN:						
Internet MTU	Save my PIN: 🔲 Enable						
Routing	Pamaining attempts: 2						
Security Settings							
NAT Settings	Cancel Submit						
USB Management	Canter						

6. Pre zmenu siete kliknite na **"General Settings" - "Internet Settings"** a z rozbalovacieho zoznamu v poli "Networ mode" zvoľte požadovanú sieť a potvrďte kliknutím na "Submit".

English 💌	General Settings->Internet Settings									
	Internet Settings									
Status										
Setup Wizard	APN settings vary with the operator. If the overent APN does not match the operator, internet services may be unavailable									
General Settings	an resoluting vary manufactoperator, in the surrent according internation the operator, memori schnocs may be anardinable.									
SIM Settings	Note: Configure the APN after consulting with the operator.									
→ Internet Settings										
DHCP Settings	Data Conr	nect								
WLAN Settings			Data connection:	Connected						
WLAN WPS			Network mode:	Auto	1	~ >>				
WLAN Multi-SSID			Data APN:			Auto APN				
WLAN Access Restrictions			Connection mode:	Always on						
Internet MTU			Connection mode.	Aiwayo on	t					
Routing										
Security Settings										
NAT Settings	voice con	inect								
USB Management			Voice connection:	Connected						
VolP			Voice APN:	voip		~				
QoS			Connection mode:	Always on		~				
VPN										
System										
Logout	APN Profil	le						Edit APN Profile		
	Index	APN	Dialed Num	ber	User Name	Pa	ssword	Authentication		
	1							Auto		
	2	voip						Auto		
								Cancel Submit		

7. Prípadnú hlášku o nedostupnosti niektorých služieb potvrďte kliknutím na "OK". Následne dôjde k odhláseniu z webového rozhrania a reštartu routera.

The VoIP is applicable in LTE mode only. Are you sure you want to continue?							
OK Zrušit							